

# ROC235B

19" 1U Rack-mount Intel®  
QM77 Fanless Rugged System



## Safety information

### Electrical safety

- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.
- When adding or removing devices to or from the system, ensure that the power cables for the devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.
- Before connecting or removing signal cables from the motherboard, ensure that all power cables are unplugged.
- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.
- Make sure that your power supply is set to the correct voltage in your area.
- If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.
- If the power supply is broken, do not try to fix it by yourself. Contact a qualified service technician or your local distributor.

### Operation safety

- Before installing the motherboard and adding devices on it, carefully read all the manuals that came with the package.
- Before using the product, make sure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.
- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.
- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.
- Place the product on a stable surface.
- If you encounter any technical problems with the product, contact your local distributor.

### Statement

- All rights reserved. No part of this publication may be reproduced in any form or by any means, without prior written permission from the publisher.
- All trademarks are the properties of the respective owners.
- All product specifications are subject to change without prior notice

## Revision History

Revision	Date (yyyy/mm/dd)	Changes
V1.0	2014/8/21	Initial release
V1.2	2016/8/8	Add Pre-cut hole at rear side
V1.3	2017/7/18	Front panel placement adjustment

## Packing list

19" 1U Rack-mount Intel® QM77 Fanless Rugged System

Accessories:

Item	P/N	Description	Q'ty
1	OP0600000003100L	Driver CD	1
2	OR0100250160000L	Thermal pad GR-Hm 24.5x16.2mm T:0.3mm	1
3	ON060000000000000L	BRACKET EAR-L SPGC 280x43.4x21.3mm t:3mm	2
4	ON060000000000010L	BRACKET EAR-S SPGC 90x43.4x21.3mm t:3mm	2
5	OF0130600600000L	Screw cross circle Plating Ni White M4 L:6mm	10
6	OF0132700800000L	Screw Flat Plating Ni White M4 L:8mm	10
7		2.5" HDD cage security key	2



If any of the above items is damaged or missing, please contact your local distributor.

## Ordering information

Model Number	Description
ROC235B-ET-i7-3610QE	Intel® QM77 Fanless Rugged System with Intel® Ivy Bridge Core™ i7 Processor, 100V to 240V AC-in (-20 to 60°C)
ROC235B-ET-i5-3610ME	Intel® QM77 Fanless Rugged System with Intel® Ivy Bridge Core™ i5 Processor, 100V to 240V AC-in (-20 to 60°C)
ROC235B-ET-i3-3120ME	Intel® QM77 Fanless Rugged System with Intel® Ivy Bridge Core™ i3 Processor, 100V to 240V AC-in (-20 to 60°C)

**Table Contents**

<b>SAFETY INFORMATION .....</b>	<b>1</b>
ELECTRICAL SAFETY .....	1
OPERATION SAFETY .....	1
STATEMENT .....	1
<b>REVISION HISTORY .....</b>	<b>2</b>
<b>PACKING LIST .....</b>	<b>2</b>
<b>ORDERING INFORMATION .....</b>	<b>2</b>
<b>TABLE CONTENTS .....</b>	<b>3</b>
<b>CHAPTER 1: PRODUCT INTRODUCTION .....</b>	<b>5</b>
1.1 KEY FEATURES .....	5
1.2 FRONT PANEL COMPONENTS .....	6
1.3 REAR PANEL COMPONENTS .....	6
1.4 MECHANICAL DIMENSIONS .....	7
<b>CHAPTER 2: JUMPERS AND CONNECTORS .....</b>	<b>8</b>
2.1 FRONT PANEL CONNECTOR PIN DEFINITIONS .....	8
USB Port: USB2.0 .....	8
Status Indicators .....	8
2.2 REAR PANEL CONNECTOR PIN DEFINITIONS .....	9
LAN1_USB12: USB3.0 port 0,1 and LAN connector 1 .....	9
LAN2_USB34: USB3.0 port 3,4 and LAN connector 2 .....	9
AUDIO1: LINE-OUT/MIC-IN .....	9
DVI-D: DVI-D .....	9
VGA: VGA .....	10
HDMI: HDMI .....	10
COM1: RS232/422/485 with +12V/+5V selection .....	10
2.3 INTERNAL CONNECTORS .....	11
MINI_MPCIE: Mini PCIe connector .....	11
SATA1, SATA2: Serial ATA 3.0 Connector .....	11
SATA3, SATA4: Serial ATA 2.0 Connector .....	11
SATAP0, SATAP1: SATA Power Connector .....	12
PCI: PCI .....	12
<b>CHAPTER 3: GETTING STARTED .....</b>	<b>13</b>
3.1 2.5" EASY SWAP SSD INSTALLATION .....	13
3.2 CPU INSTALLATION .....	14
3.3 MEMORY MODULE INSTALLATION .....	16
3.4 PCI RISER CARD INSTALLATION .....	17
3.5 HOW TO INSTALL RACK MOUNT BRACKET .....	18
<b>CHAPTER 4: AMI BIOS UTILITY .....</b>	<b>19</b>
4.1 STARTING .....	19
4.2 NAVIGATION KEYS .....	19
4.3 MAIN MENU .....	20
4.4 ADVANCED MENU .....	21
4.4.1 ACPI Settings .....	22
4.4.2 CPU Configuration .....	23
4.4.3 SATA Configuration .....	25
4.4.4 Thermal Configuration .....	26
4.4.4.1 Platform thermal configuration .....	26
4.4.5 Intel Rapid Start Technology .....	27

4.4.6 Intel TXT(LT) Configuration .....	27
4.4.7 PCH-FW Configuration.....	28
4.4.8 Intel Anti-Theft Technology Configuration .....	28
4.4.9 AMT Configuration .....	29
4.4.10 USB Configuration .....	30
4.4.11 F81866 Super IO Configuration .....	31
4.4.12 F81866 H/W Monitor .....	32
4.4.13 Serial Port Console Redirection .....	33
4.4.14 CPU PPM Configuration.....	34
<b>4.5 CHIPSET.....</b>	<b>35</b>
4.5.1 PCH-IO Configuration .....	35
4.5.1.1 USB Configuration .....	36
4.5.1.2 PCH Azalia Configuration.....	37
4.5.2 System Agent (SA) Configuration.....	38
4.5.2.1 Graphics Configuration.....	39
4.5.2.2 Memory Configuration.....	40
<b>4.6 BOOT SETTING.....</b>	<b>41</b>
<b>4.7 SECURITY.....</b>	<b>42</b>
<b>4.8 SAVE AND EXIT.....</b>	<b>43</b>

## Chapter 1: Product Introduction

### 1.1 Key Features

System	
CPU Type	Intel® 22nm Ivy Bridge Processor (Mobile) socket (rPGA988) Core™ i7-3610QE 2.3 GHz (6M Cache, 45W) Core™ i5-3610ME 2.7 GHz (3M Cache, 35W) Core™ i3-3120ME 2.4 GHz (3M Cache, 35W)
Chipset	Intel® QM77
Memory Type	2 x 204-pin SO-DIMM DDR3 1333/1600 MHz up to 16 GB
Expansion Slot	2 x PCI 1 x Mini PCIe
Storage Device	2 x 2.5" Easy Swap HDD/SSD Supports RAID 0,1
Front I/O	
Power Button	1
Power LED	1
HDD LED	1
Ethernet Status LED	2 sets
USB	2 x USB 2.0
Rear I/O	
VGA	1
DVI-D	1
HDMI	1
Ethernet	2 x RJ45
Audio	Mic-in, Line-out
COM	1 x RS232/422/485 with 5V/12V selectable
USB	4 x USB 3.0
AC-in	100V~240V
Pre-cut hole	1 for DB9 connector
Mechanical & Environment	
Power Requirements	100V to 240V AC-in
Dimension (W x H x D)	440 x 44 x 380mm (17.32" x 1.73" x 14.96")
Operating Temp.	-20 to 60°C (ambient with air flow)
Storage Temp.	-20 to 80°C
Relative Humidity	10% to 90%, non-condensing
Certification	CE, FCC


\*Specifications are subject to change without notice\*

## 1.2 Front Panel Components




1	LAN Status LED
2	HDD LED
3	Power LED
4	Power Button
5	USB 2.0 x 2
6	2.5" HDD Cage window

## 1.3 Rear Panel Components

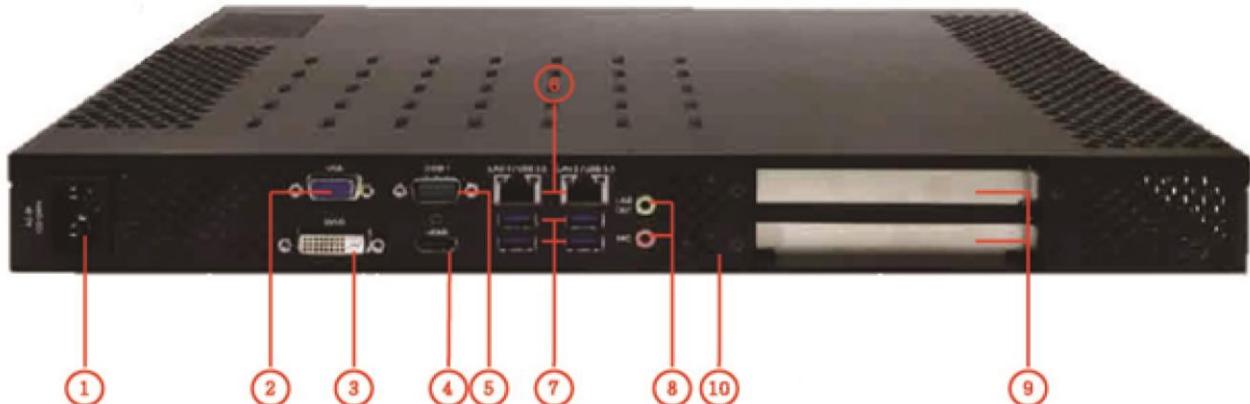

1	100V to 240V AC-in
2	VGA port
3	DVI-D port
4	HDMI port
5	COM port, RS232/422/485 with 5V/12V selectable
6	LAN port, 2 x RJ45
7	4 x USB 3.0
8	Audio jack (Mic-in, Line-out)
9	2 x Expansion slot (PCI)
10	Pre-cut hole for DB9 connector

## 1.4 Mechanical Dimensions

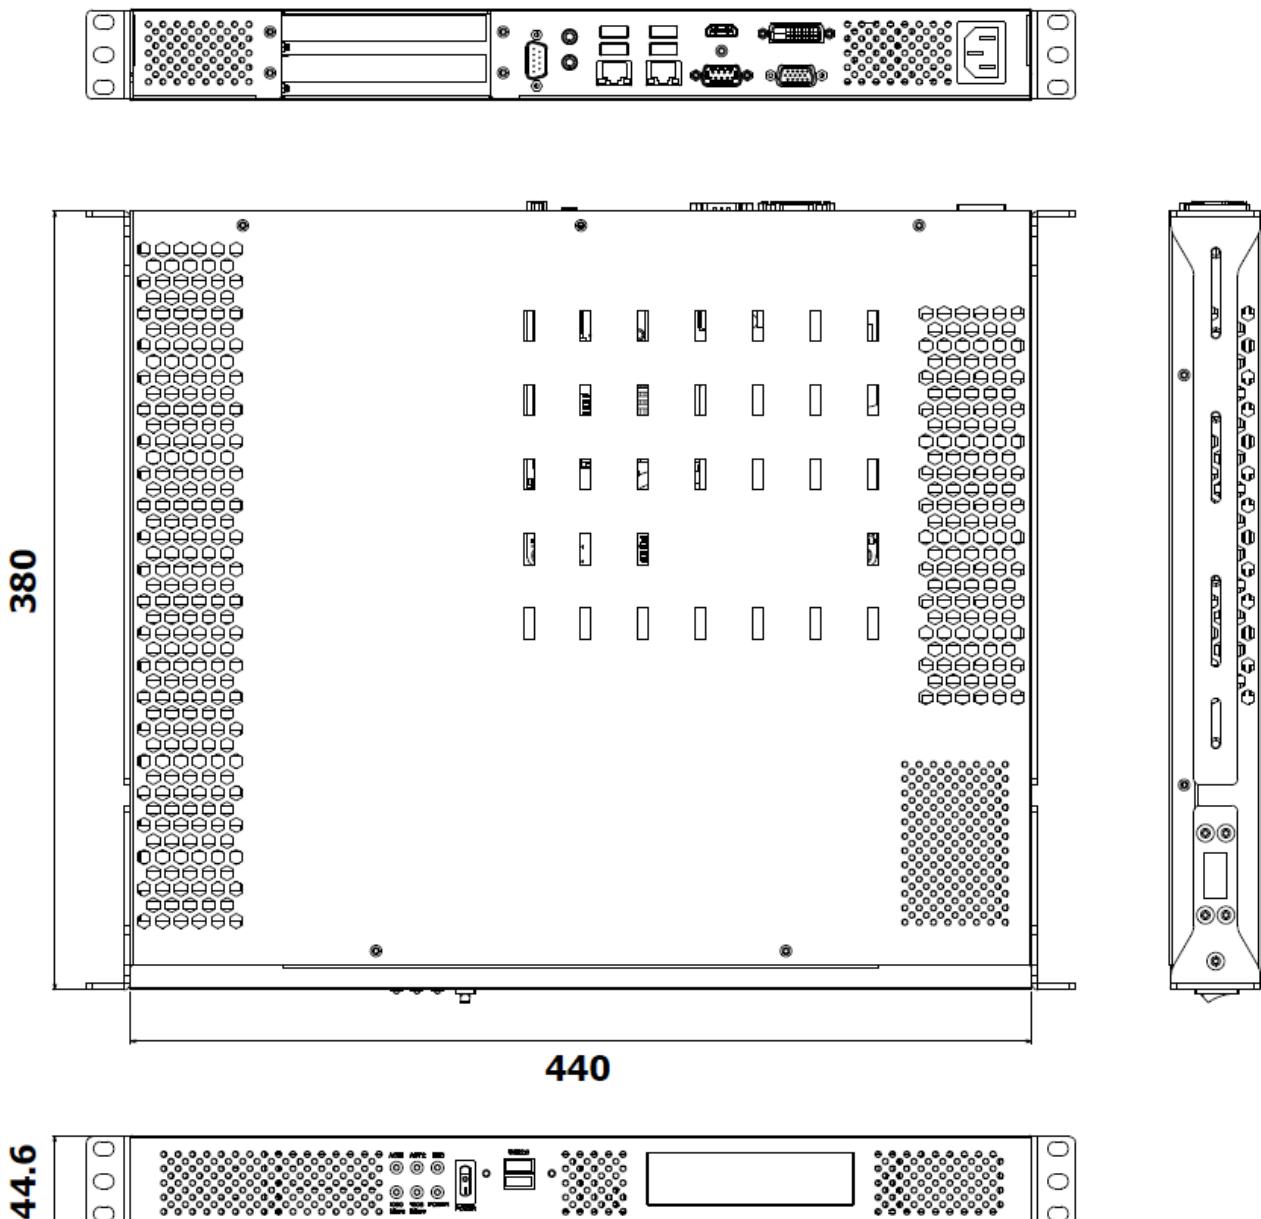


## Chapter 2: Jumpers and Connectors

### 2.1 Front Panel Connector Pin Definitions

#### USB Port: USB2.0


Pin	Definition	Pin	Definition
1	+5V	5	+5V
2	USBD-	6	USBD-
3	USBD+	7	USBD+
4	GND	8	GND

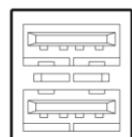

#### Status Indicators

Status	LED Color	HDD
HDD	Red	
PWR	Green	

SPEED LED:	ACTIVE 1 LED:	ACTIVE 2 LED:
RED: 1000Mbps	ORANGE (BLINKING): ACTIVITY	ORANGE (BLINKING): ACTIVITY
GREEN: 100Mbps	ORANGE (NO BLINKING): ACTIVITY	ORANGE (NO BLINKING): ACTIVITY

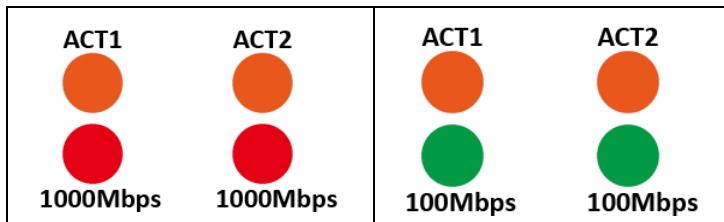


## 2.2 Rear Panel Connector Pin Definitions

**LAN1\_USB12: USB3.0 port 0,1 and LAN connector 1**

**LAN2\_USB34: USB3.0 port 3,4 and LAN connector 2**

Upper USB		Lower USB		LAN	
Pin	Definition	Pin	Definition	Pin	Definition
1	+5VDUAL	1	+5VDUAL	1	D0+
2	D-	2	D-	2	D0-
3	D+	3	D+	3	D1+
4	GND	4	GND	4	D1-
5	StdA_SSTX-	5	StdA_SSTX-	5	D2+
6	StdA_SSTX+	6	StdA_SSTX+	6	D2-
7	GND_DRIAN	7	GND_DRIAN	7	D3+
8	StdA_SS RX-	8	StdA_SS RX-	8	D3-
9	StdA_SS RX-	9	StdA_SS RX-		
SPEED LED: (Lift)		ACTIVE LED: (Right)			
GREEN: 1000Mbps		ORANGE (BLINKING): ACTIVITY			
ORANGE: 100Mbps		No Light: NOT LINK			
No Light: 10Mbps		ORANGE (NO BLINKING): LINK			

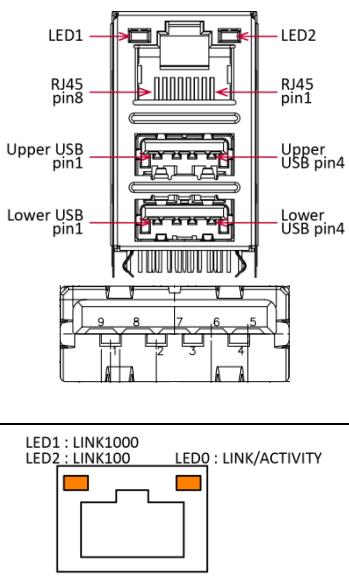


The diagram illustrates the rear panel connectors. At the top, two RJ45 ports are labeled 'RJ45 pin8' and 'RJ45 pin1'. Below them are two pairs of USB ports: 'Upper USB pin1' and 'Lower USB pin1'. To the right of the ports are two LEDs labeled 'LED1' and 'LED2'. A detailed pin assignment diagram shows the 9-pin configuration: Pin 1 is GND, Pin 2 is D-, Pin 3 is D+, Pin 4 is GND, Pin 5 is StdA\_SSTX-, Pin 6 is StdA\_SSTX+, Pin 7 is GND\_DRIAN, Pin 8 is StdA\_SS RX-, and Pin 9 is StdA\_SS RX-. Below this, a legend defines the LED states: LED1 is orange for 1000Mbps and green for 100Mbps; LED2 is orange for activity and off for no link; and LED0 is orange for link and off for no link.

## AUDIO1: LINE-OUT/MIC-IN

Pin	Definition		
1	Line-out		Line-out
2	Mic-in		Mic-in

## DVI-D: DVI-D


Pin	Definition	Pin	Definition
1	TMDS2-	13	NC
2	TMDS2+	14	+5V
3	GND	15	GND
4	NC	16	HOTPLUG_DETECT
5	NC	17	TMDS0-
6	DDC_CLK	18	TMDS0+
7	DDC_DATA	19	GND
8	NC	20	NC
9	TMDS1-	21	NC
10	TMDS1+	22	GND
11	GND	23	TMDCLK+
12	NC	24	TMDCLK-

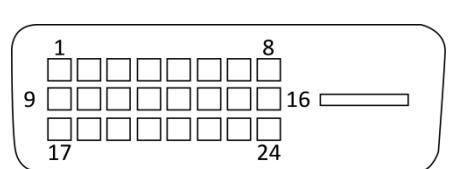


The diagram shows a 24-pin DVI-D connector. The pins are numbered 1 through 24. Pins 1, 2, 3, 5, 6, 7, 9, 10, 11, 13, 14, 15, 17, 18, 19, 20, 21, 22, and 23 are labeled with their respective pin names. Pin 8 is labeled '8' at the top, and pins 16, 24 are labeled at the bottom right.

**VGA: VGA**


Pin	Definition	Pin	Definition
1	RED	9	+5V
2	GREEN	10	GND
3	BLUE	11	NC
4	NC	12	DDC DATA
5	GND	13	H SYNC
6	GND	14	V SYNC
7	GND	15	DDC LOCK
8	GND		

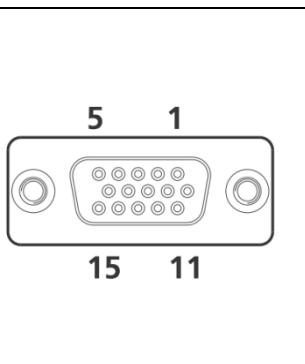
**HDMI: HDMI**

Pin	Definition	Pin	Definition
1	HDMI_2P	11	GND
2	GND	12	HDMI_CLKN
3	HDMI_2N	13	NC
4	HDMI_1P	14	NC
5	GND	15	DDC CLOCK
6	HDMI_1N	16	DDC DATA
7	HDMI_0P	17	GND
8	GND	18	+5V
9	HDMI_ON	19	HOTPLUG_DETECT
10	HDMI_CLKP		

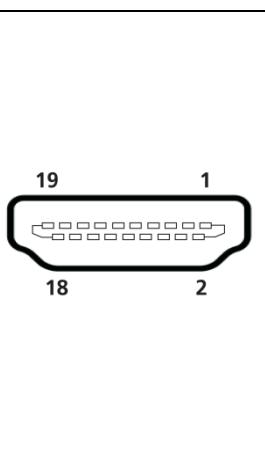
**COM1: RS232/422/485 with +12V/+5V selection**


Pin	RS-232	RS-422	Half Duplex RS-485
1	DCD-	TX-	DATA-
2	RXD	RX+	NA
3	TXD	TX+	DATA+
4	DTR-	RX-	NA
5	GND	GND	GND
6	DSR-	NA	NA
7	RTS-	NA	NA
8	CTS-	NA	NA
9	COM1P9SEL (Define by JP5)	COM1P9SEL (Define by JP5)	COM1P9SEL (Define by JP5)

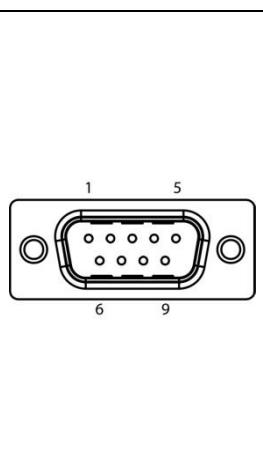

## 2.3 Internal Connectors


**MINI\_MPCIE: Mini PCIe connector**

Pin	Definition	Pin	Definition
1	WAKE#	2	+3.3VAUX
3	NC	4	GND
5	NC	6	+1.5V
7	CLKREQ#	8	NC
9	GND	10	NC
11	REF CLK-	12	NC
13	REF CLK+	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	Wireless LAN Disable#
21	GND	22	RESET#
23	RXN	24	+3.3VAUX
25	RXP	26	GND
27	GND	28	+1.5V
29	GND	30	SMBUS CLOCK
31	TXN	32	SMBUS DATA
33	TXP	34	GND
35	GND	36	USB DATA-
37	GND	38	USB DATA+
39	+3.3VAUX	40	GND
41	+3.3VAUX	42	NC
43	GND	44	NC
45	Control Link CLOCK	46	NC
47	Control Link DATA	48	+1.5V
49	Control Link RESET#	50	GND
51	Blue Tooth Disable#	52	+3.3V VAUX

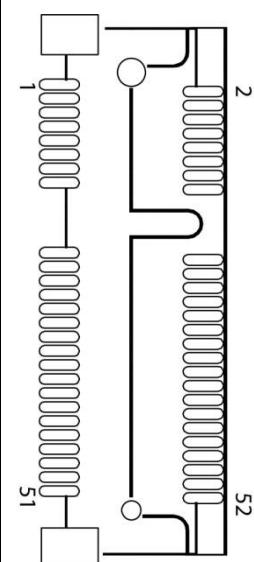


**SATA1, SATA2: Serial ATA 3.0 Connector**

Pin	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND




**SATA3, SATA4: Serial ATA 2.0 Connector**

Pin	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND




**SATAP0, SATAP1: SATA Power Connector**

Pin	Definition	
1	+5V	
2	GND	
3	GND	
4	+12V	


**PCI: PCI**

Pin	Definition	Pin	Definition	Pin	Definition	Pin	Definition
A1	Pull down 4.7K to GND	A32	AD16	B1	-12V	B32	AD17
A2	+12V	A33	+3.3	B2	GND	B33	CBE2#
A3	GND	A34	FRAME#	B3	GND	B34	GND
A4	GND	A35	GND	B4	NC	B35	IRDY#
A5	+5V	A36	TRDY#	B5	+5V	B36	+3.3V
A6	INTA#	A37	GND	B6	+5V	B37	DEVSEL#
A7	INTC#	A38	STOP#	B7	INTB#	B38	GND
A8	+5V	A39	+3.3V	B8	INTD#	B39	LOCK#
A9	GNT1#	A40	SMBUS CLOCK	B9	NC	B40	PERR#
A10	+5V	A41	SMBUS DATA	B10	REQ1#	B41	+3.3V
A11	NC	A42	GND	B11	NC	B42	SERR#
A12	GND	A43	PAR	B12	GND	B43	+3.3V
A13	GND	A44	AD15	B13	GND	B44	CBE1#
A14	+3.3VAUX	A45	+3.3V	B14	CLOCK1	B45	AD14
A15	RESET#	A46	AD13	B15	GND	B46	GND
A16	+5V	A47	AD11	B16	CLOCK0	B47	AD12
A17	GNT0#	A48	GND	B17	GND	B48	AD10
A18	GND	A49	AD9	B18	REQ0#	B49	GND
A19	PCI_PME#	A50	Keyway	B19	+5V	B50	Keyway
A20	AD30	A51	Keyway	B20	AD31	B51	Keyway
A21	+3.3V	A52	CBE0#	B21	AD29	B52	AD8
A22	AD28	A53	+3.3V	B22	GND	B53	AD7
A23	AD26	A54	AD6	B23	AD27	B54	+3.3V
A24	GND	A55	AD4	B24	AD25	B55	AD5
A25	AD24	A56	GND	B25	+3.3V	B56	AD3
A26	AD20	A57	AD2	B26	CBE3#	B57	GND
A27	+3.3V	A58	AD0	B27	AD23	B58	AD1
A28	AD22	A59	+5V	B28	GND	B59	+5V
A29	AD20	A60	REQ64#	B29	AD21	B60	ACK64#
A30	GND17	A61	+5V	B30	AD19	B61	+5V
A31	AD18	A62	+5V	B31	+3.3V	B62	+5V

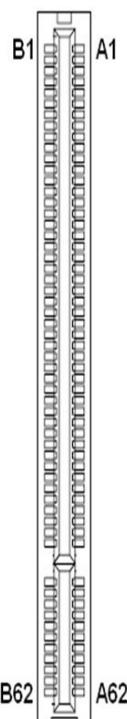

## Chapter 3: Getting Started

This chapter provides more detailed information and let you know how to install components into the ROC235B embedded System.



**Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.**

### 3.1 2.5" Easy Swap SSD installation

ROC235B supports two 2.5" Easy Swap SSD


1. Use the key to open the HDD cage window and then insert the 2.5" SSD inside the system



2. Pull the front panel window back and ensure the SSD was set into the system. Make sure that the door is locked.



### 3. LED indicator

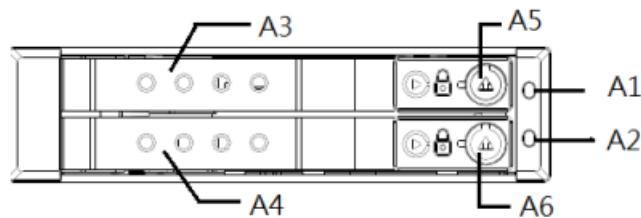

A1 : HDD-0 LED---Green: HDD installed on  
Orange blinking : Accessing  
A2 : HDD-1 LED---Green: HDD installed on  
Orange blinking : Accessing  
A3 : Upper cover & HDD extractor  
A4 : Lower cover & HDD extractor  
A5 : Upper HDD Safety key Lock  
A6 : Lower HDD Safety key Lock

### 3.2 CPU installation

ROC235B supports Intel® 22nm Ivy Bridge Processor (Mobile) socket (rPGA988)  
Core™ i7-3610QE (4C x 3.3 GHZ), 6M L2 cache (45W)  
Core™ i5-3610ME (2C x 2.7 GHZ), 3M L2 cache (35W)  
Core™ i3-3120ME (2C x 2.4 GHZ), 3M L2 cache (35W)


1. Remove 4 screws from CPU heat sink's cover, and 3 screws of left bracket from system heat sink.



2. Take off the CPU heat sink's cover.




3. Remove heat sink from left side of system, and raise heat pipe up from heat sink.

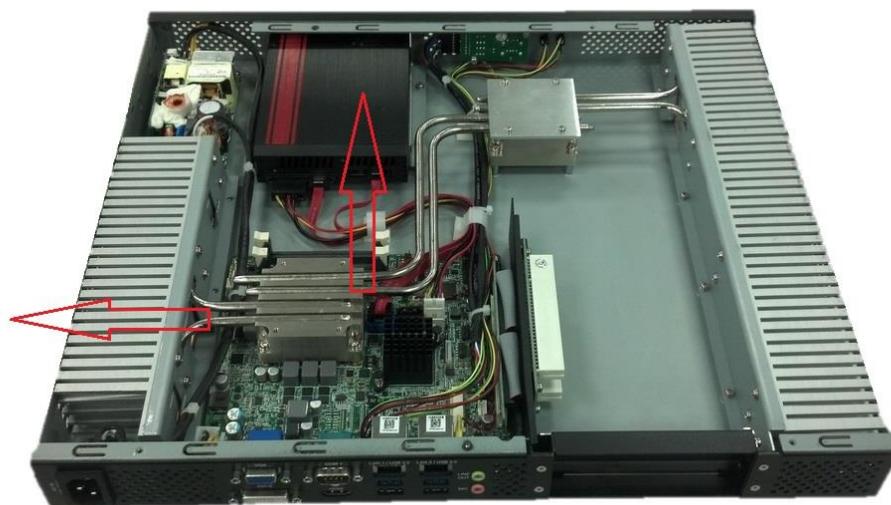


4. Remove 4 screws from CPU heat sink.



5. Remove CPU heat sink to install CPU on motherboard.

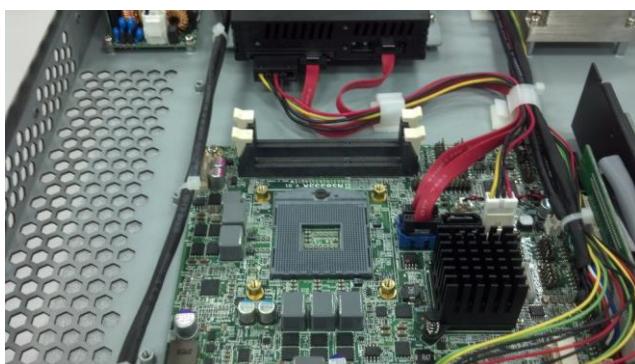


6. Put the thermal pad (P/N: OR0100250160000L) on the CPU, screw the system heatsink back, put the heat sink with heatpipe back on the left side, screw the heatsink's cover back, then fasten 4 screws of left bracket from system heat sink.

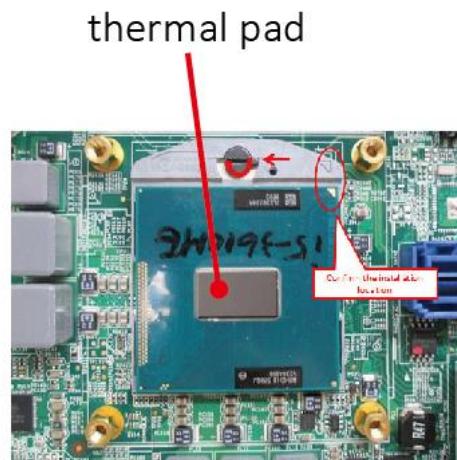

### 3.3 Memory module installation

ROC235B supports 2 x 204-pin SO-DIMM DDR3 1333/1600 MHz up to 16GB

1. Remove the top case and locate 2 memory slots on the motherboard.
2. Insert the RAM into the RAM slot. Align the notch on the module with the notch in the slot, and then apply equal pressure onto the stick until the clamps on the side click and lock the RAM in. You may have to apply a fair amount of pressure, but never force it in.

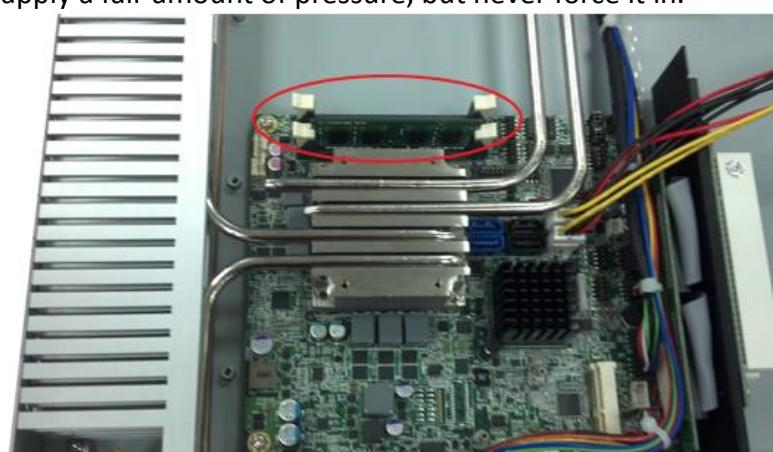

### 3.4 PCI riser card installation

ROC235A supports 2 x PCI expansion slots.

1. Drive each 5 screws off as the marks for remove riser card.




2. Remove the screws to set PCI add-on card on PCI riser card.




3. Insert PCI add-on card into PCI slot from riser card.



4. Insert add-on card screw to firmed the add-on card, and insert the PCI riser's bridge board to motherboard PCI slot.

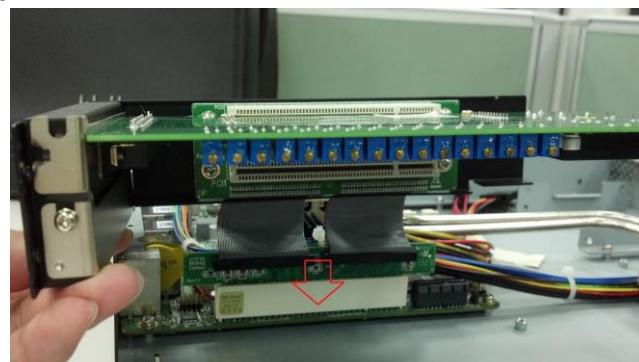

5. Insert PCI riser back to system and lock each screws.

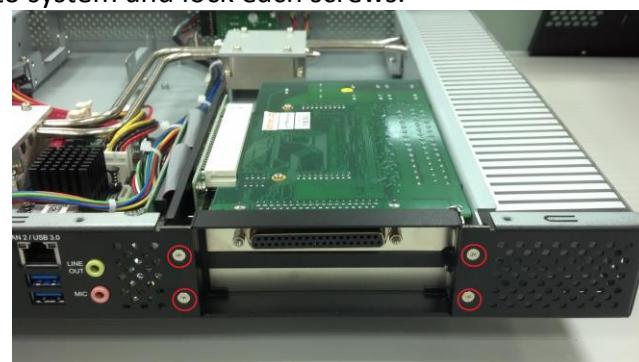

### 3.5 How to Install rack mount bracket

For install rack mount bracket, insert each screws (P/N: OF0130600600000L and OF0132700800000L) to firmed the bracket.



## Chapter 4: AMI BIOS UTILITY

This chapter provides users with detailed descriptions on how to set up a basic system configuration through the AMI BIOS setup utility.

### 4.1 Starting

To enter the setup screens, perform the following steps:

- Turn on the computer and press the <Del> key immediately.
- After the <Del> key is pressed, the main BIOS setup menu displays. Other setup screens can be accessed from the main BIOS setup menu, such as the Chipset and Power menus.

### 4.2 Navigation Keys

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process.

Some of the hot keys are <F1>, <F10>, <Enter>, <ESC>, and <Arrow> keys.




Some of the navigation keys may differ from one screen to another.

Left/Right	The Left and Right <Arrow> keys moves the cursor to select a menu.
Up/Down	The Up and Down <Arrow> keys moves the cursor to select a setup screen or sub-screen.
+– Plus/Minus	The Plus and Minus <Arrow> keys changes the field value of a particular setup setting.
Tab	The <Tab> key selects the setup fields.
F1	The <F1> key displays the General Help screen.
F10	The <F10> key saves any changes made and exits the BIOS setup utility.
Esc	The <Esc> key discards any changes made and exits the BIOS setup utility.
Enter	The <Enter> key displays a sub-screen or changes a selected or highlighted option in each menu.

### 4.3 Main Menu

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

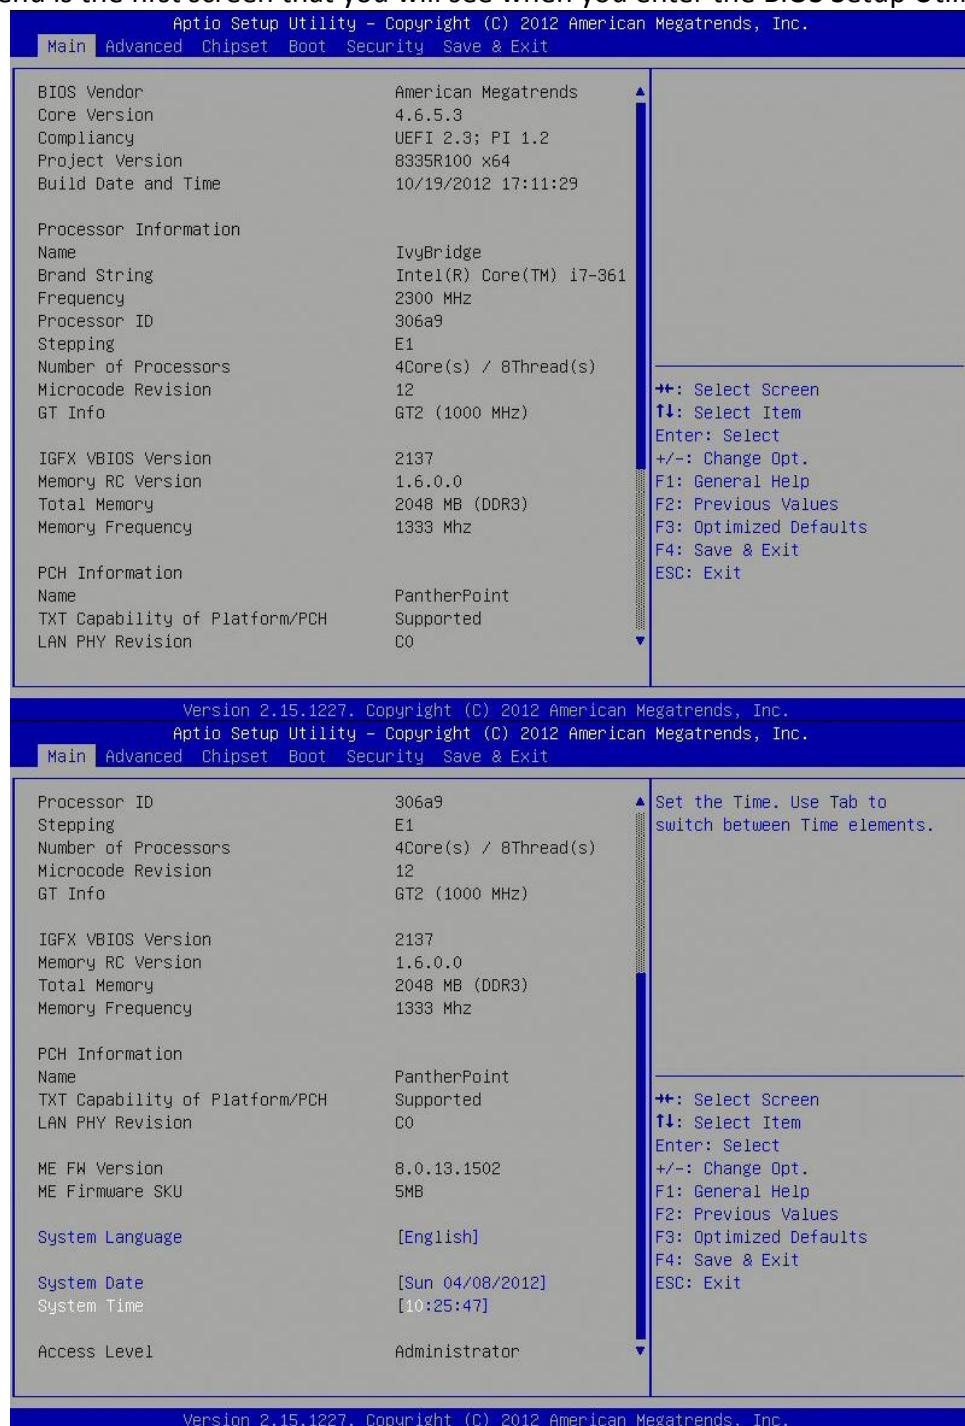

### System Language

Use this function to select the system language.

### System Date

Use this function to change the system date.

Select System Date using the Up and Down <Arrow> keys. Enter the new values through the keyboard. Press the Left and Right <Arrow> keys to move between fields.

The date setting must be entered in MM/DD/YY format.

### System Time

Use this function to change the system time.

Select System Time using the Up and Down <Arrow> keys. Enter the new values through the keyboard. Press the Left and Right <Arrow> keys to move between fields.

The time setting is entered in HH:MM:SS format.

**Note:** The time is in 24-hour format. For example, 5:30 A.M. appears as 05:30:00, and 5:30 P.M. as 17:30:00.

### Access Level

Displays the access level of the current user in the BIOS.

## 4.4 Advanced Menu

The Advanced Menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference. **Setting incorrect field values may cause the system to malfunction.**



#### 4.4.1 ACPI Settings

##### System ACPI parameters



##### **Enable ACPI Auto Configuration**

Enables or disables BIOS ACPI auto configuration.

##### **Enable Hibernation**

Enables or disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some OS.

##### **ACPI Sleep State**

Select the ACPI sleep state the system will enter when the suspend button is pressed.

##### **Lock Legacy Resources**


Enables or Disables System Lock of Legacy Resources.

##### **S3 Video Repost**

Enable or disable S3 Video Repost.

#### 4.4.2 CPU Configuration

This section is used to configure the CPU.

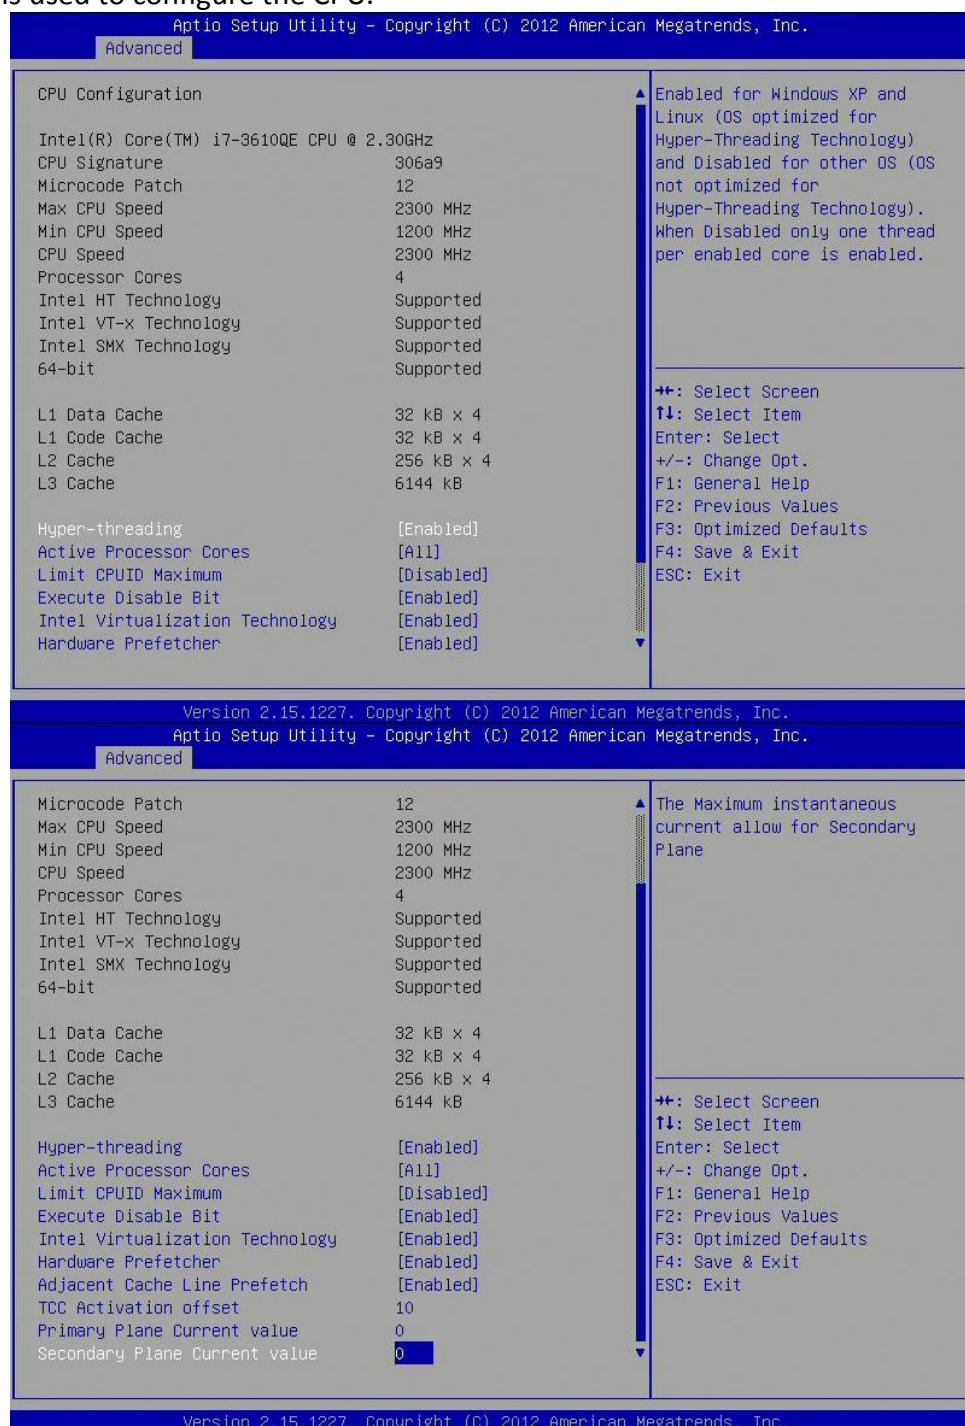

**Hyper-threading**

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When disabled only one thread per enabled core is enabled.

**Active Processor Cores**

Number of cores to enable in each processor package.

**Limit CPUID Maximum**

Disabled for Windows XP.

**Execute Disable Bit**

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

**Intel Virtualization Technology**

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Hardware Prefetcher**

To turn on/off the Mid Level Cache (L2) streamer prefetcher

**Adjacent Cache Line Prefetch**

To turn on/off prefetching of adjacent cache lines

**TCC Activation Offset**

Offset from the factory TCC activation temperature

**Primary Plane Current Value**

The Maximum instantaneous current allow for primary plane

**Secondary Plane Current Value**

The Maximum instantaneous current allow for secondary plane

#### 4.4.3 SATA Configuration

This section is used to configure the SATA drives.



#### SATA Controller(s)

Enable or disable SATA device.

#### SATA Mode Selection

Determines how SATA controller(s) operate.

#### SATA Test Selection

Enable or disable Test Mode

#### IDE Legacy/Native Mode Selection

IDE Legacy/Native Mode Selection

#### Serial ATA Port 0 – 5


Displays information on the SATA devices detected

#### 4.4.4 Thermal Configuration

##### Platform thermal configuration options



##### 4.4.4.1 Platform thermal configuration

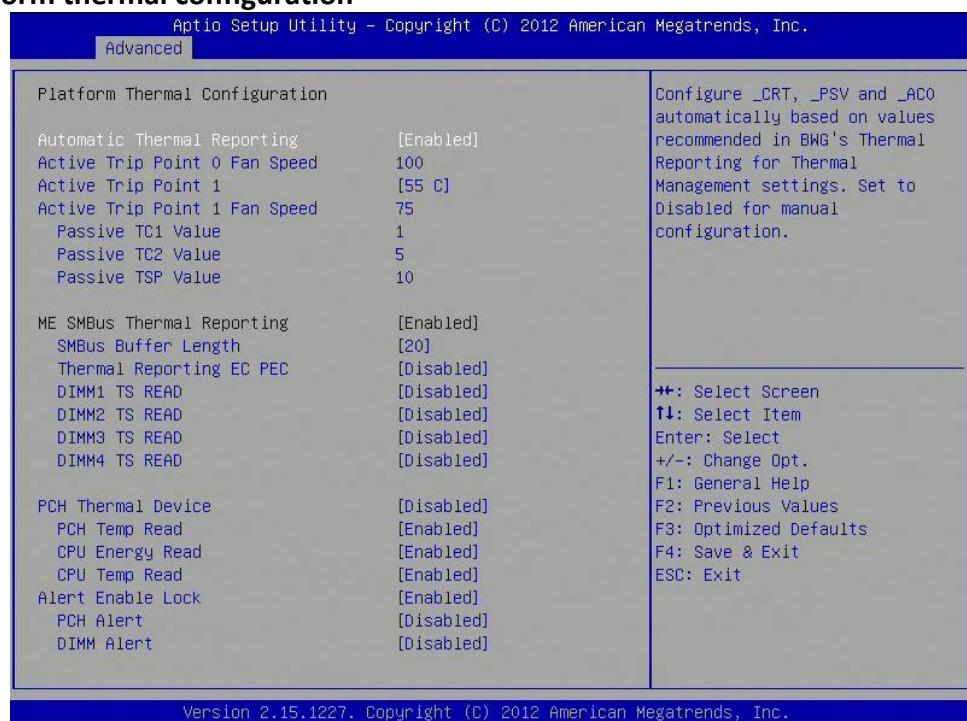


#### 4.4.5 Intel Rapid Start Technology



#### 4.4.6 Intel TXT(LT) Configuration

##### Intel Trusted Execution Technology

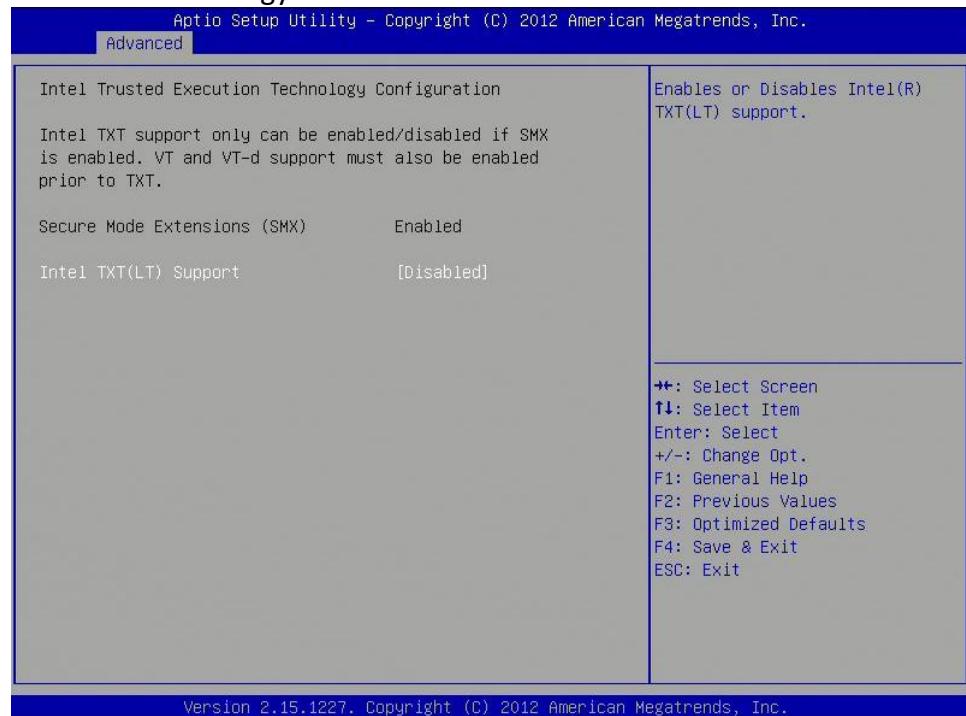

##### Intel TXT(LT) Support

Enables or disables Intel TXT(LT) support

#### 4.4.7 PCH-FW Configuration

This section is used to configure Management Engine Technology parameters.



#### 4.4.8 Intel Anti-Theft Technology Configuration

Disabling Intel AT allow user to login platform. This is strictly for testing only. This does not disable Intel AT services in ME



##### Intel Anti-Theft Technology


Enable or Disable Intel AT in BIOS for testing only

##### Intel Anti-Theft Technology Rec

Set the number of times Recovery attempted will be allowed.

#### 4.4.9 AMT Configuration

This section is used to configure Active Management Technology (AMT) options.

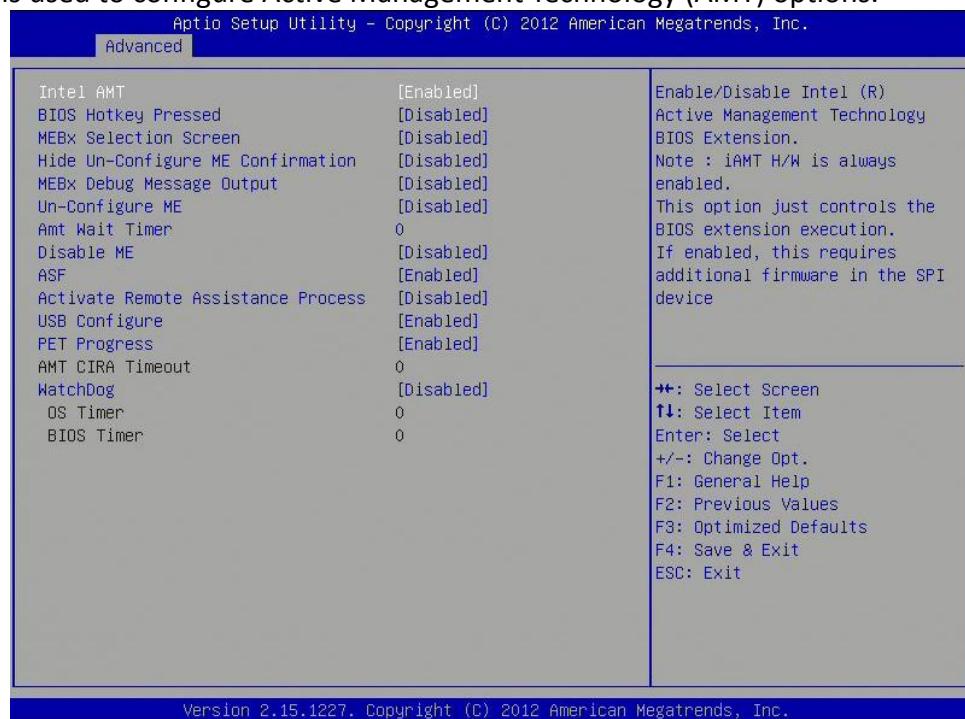

##### **Intel AMT**

Enable/disables Intel Active Management Technology BIOS extension.

Note: iAMT H/W is always enabled.

This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

##### **BIOS Hotkey Pressed**

Enable/disable BIOS hotkey press.

##### **MEBx Selection Screen**

Enable/disable MEBx Selection Screen

##### **Hide Un-Configure ME Confirmation**

Hide Un-Configure ME without password confirmation prompt

##### **MEBx Debug Message Screen**

Enable MEBx debug message output

##### **Un-Configure ME**

Perform AMT/ME unconfigure without password operation.

##### **Amt Wait Timer**

Set timer to wait before sending ASF\_GET\_BOOT\_OPTIONS.

##### **Disable ME**

Set ME to Soft Temporary Disabled

**ASF**

Enable/Disable Alert specification Format

**Activate Remote Assistance Process**

Trigger CIRA boot.

**USB Configure**

Enable/Disable USB configure function.

**PET Progress**

User can Enable/Disable PET Events progress to receive PET events or not.

**Watchdog Timer**

Enable/Disable Watchdog Timer.

**4.4.10 USB Configuration**

This section is used to configure the USB

**Legacy USB Support**

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option will keep USB devices available only for EFI applications.

**USB3.0 Support**

Enable/Disable USB3.0 (XHCI) Controller support.

**XHCI Hand-off**

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

**EHCI Hand-off**

This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

**Port 64/60 Emulation**

Enables I/O port 60h/64h emulation support. This should be enabled for the complete USB keyboard legacy support for non-USB aware OSes.

**USB Transfer time-out**

The time-out value for Control, Bulk, and Interrupt transfers.

**Device reset time-out**


USB mass Storage device start Unit command time-out.

**Device power-up delay**

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

**4.4.11 F81866 Super IO Configuration**

System super IO chip parameters

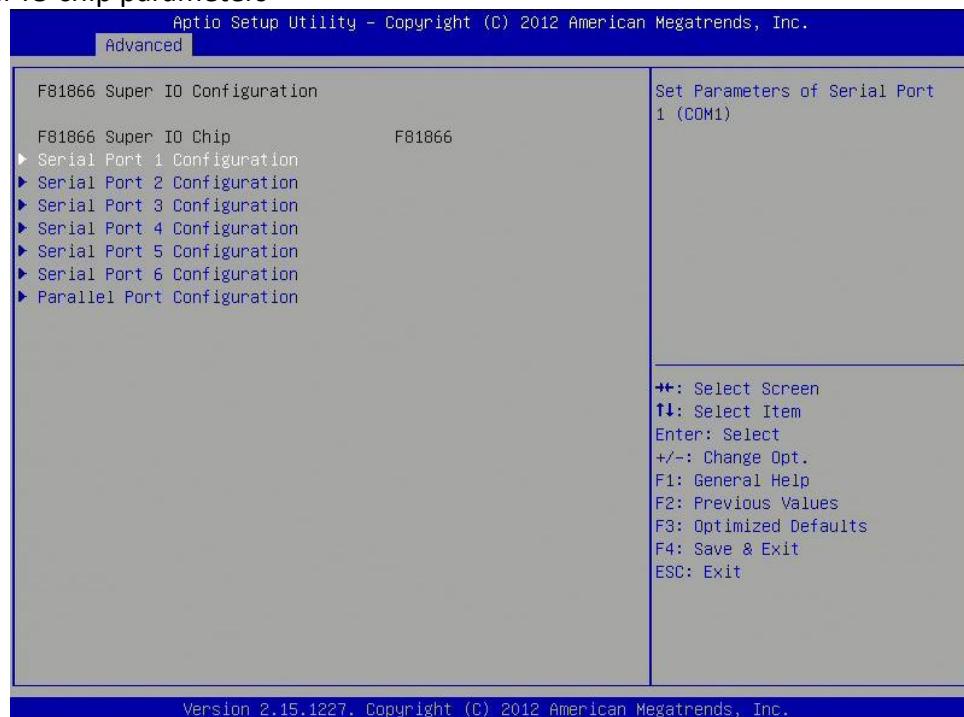**Serial Port Configuration**


Set Parameters of Serial Ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

**Parallel Port configuration**

Set parameters of parallel port (LPT/LPTE)

**4.4.12 F81866 H/W Monitor**

This section is used to monitor hardware status such as temperature, fan speed and voltages.

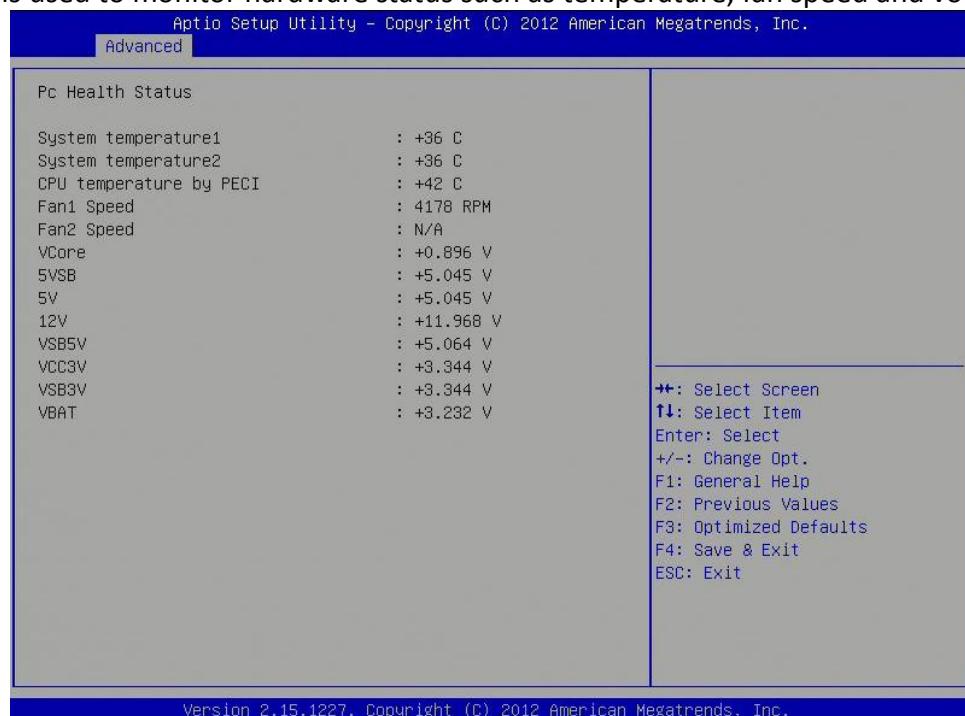**System Temperature**

Detects and displays the current system temperature.

**CPU Temperature**


Detects and displays the current CPU temperature.

**Fan1/2 Speed**

Detects and displays the current CPU fan speed.

#### 4.4.13 Serial Port Console Redirection

This screen provides information about functions for specifying the Serial Port Console Redirection configuration settings. Console redirection can be used to remotely operate system settings and the EFI console.

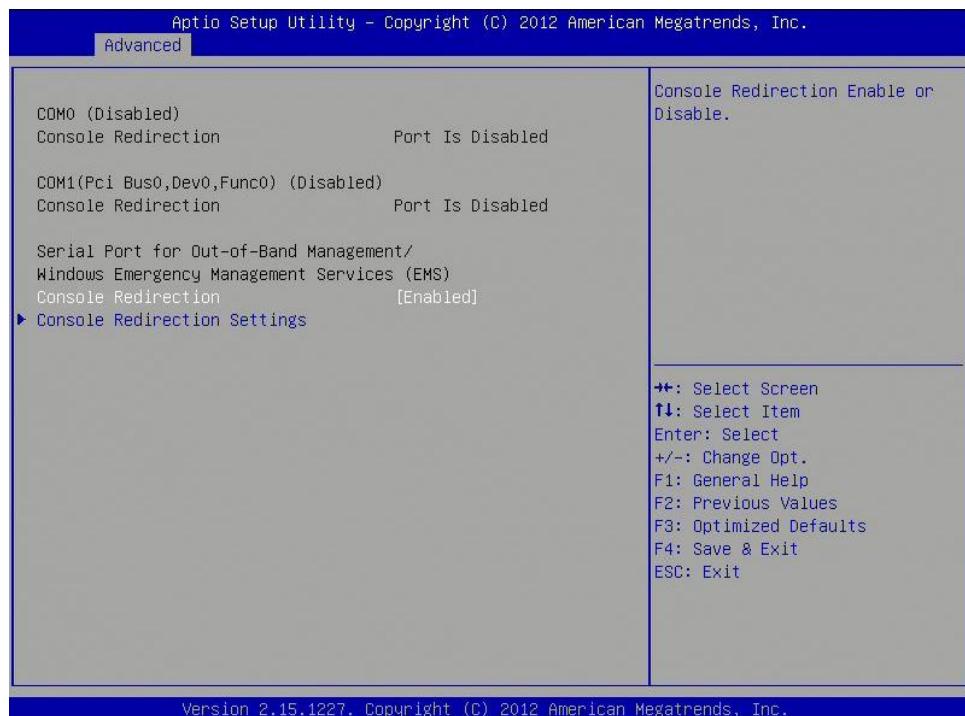

##### Console Redirection

Console Redirection Enable or Disable.

##### Console Redirection Settings

The setting specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

#### 4.4.14 CPU PPM Configuration

CPU PPM configuration parameters



##### **EIST**

Enables or disables Intel SpeedStep.

##### **CPU C3 Report**

Enable or disable CPU C3 (ACPI C2) report to OS.

##### **Config TDP LOCK**

Lock the Config TDP control register

##### **Long duration power limit**

Long duration power limit in Watts, 0 means use factory default.

##### **Long duration maintained**

Time window which the long duration power is maintained.

##### **Short duration power limit**

Short duration power limit in Watts, 0 means use factory default.

##### **ACPI T State**

Enable or disable ACPI state support.

## 4.5 Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



### 4.5.1 PCH-IO Configuration

This section allows you to configure the North Bridge Chipset.



## USB Configuration

USB configuration settings

**PCH Azalia Configuration**

PCH Azalia configuration settings

**PCH LAN Controller**

Enable or disable onboard NIC.

**Wake on LAN**

Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)

**PCIE LAN Controller**

Enable or disable onboard PCIE LAN

**Wireless LAN Controller**

Enable or disable onboard MPCIE LAN-Wireless LAN.

**SLP\_S4 Assertion Width**

Select a minimum assertion width of the SLP\_S4# signal.

**Restore AC Power Loss**


Select AC power state when power is re-applied after a power failure.

**RI Wake Up**

RI wake up function select.

**Watch Dog Function select**

Watch Dog function enabled or disabled.

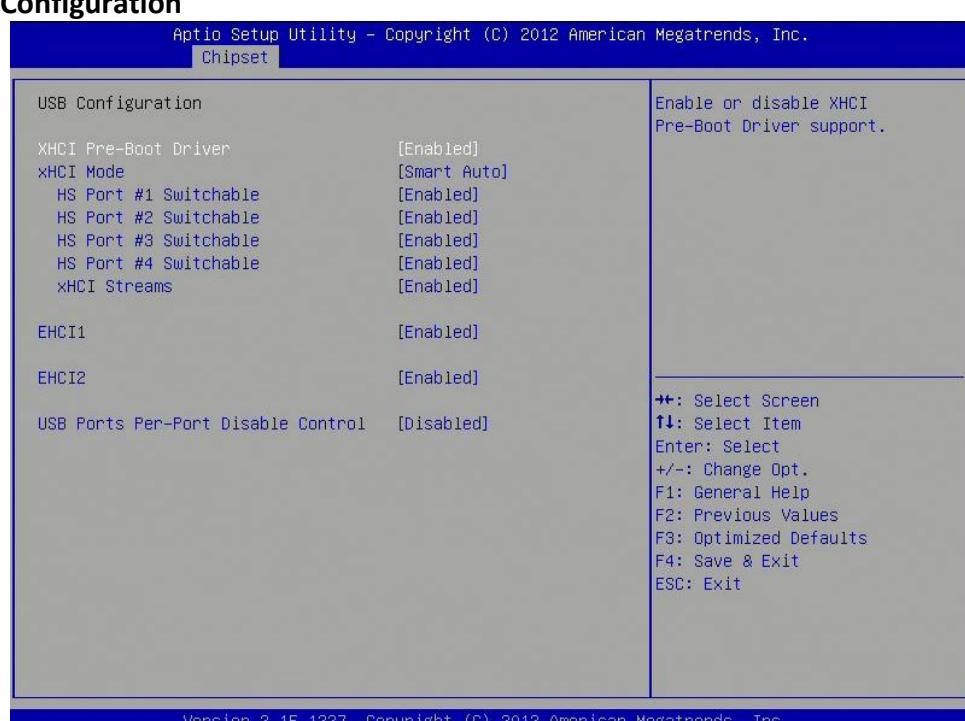**4.5.1.1 USB Configuration**

**XHCI Pre-Boot Driver**

Enable or disable XHCI Pre-Boot driver support.

**XHCI Mode**

Mode of operation of XHCI controller

**HS Port #1/2/3/4 Switchable**

Allows for HS port switching between xHCI and EHCI. If disabled, port is routed to EHCI. If HS port is routed to xHCI, the corresponding SS port is enabled.

**xHCI Streams**

Enable or disable xHCI Maximum Primary Stream Array Size.

**EHCI1/2**

Control the USAB EHCI (USB 2.0) functions. One EHCI controller must always be enabled.

**USB Ports Per-Port Disable Control**

Control each of the USB ports (0~13) disabling.

**4.5.1.2 PCH Azalia Configuration****Azalia**

Control Detection of the Azalia device.

Disabled=Azalia will unconditionally disabled.

Enabled=Azalia will be unconditionally enabled.

Auto=Azalia will enabled if present, disabled otherwise.

**Azalia PME**

Enable or disable Power Management capability of audio controller.

**Azalia Internal HDMI codec**

Enable or disable internal HDMI codec for Azalia.

**4.5.2 System Agent (SA) Configuration**

This section is used to configure the System Agent (SA) configuration.

**VT-d**

Check to enable VT-d function on MCH.

Enable NB CRID

Enable or disable NB CRID WorkAround.

**C-State Pre-Wake**

Controls C-State Pre-Wake feature for ARAT, in SSKPD[57].


**Graphics Configuration**

Configure graphics settings

**Memory Configuration**

Memory configuration parameters

#### 4.5.2.1 Graphics Configuration

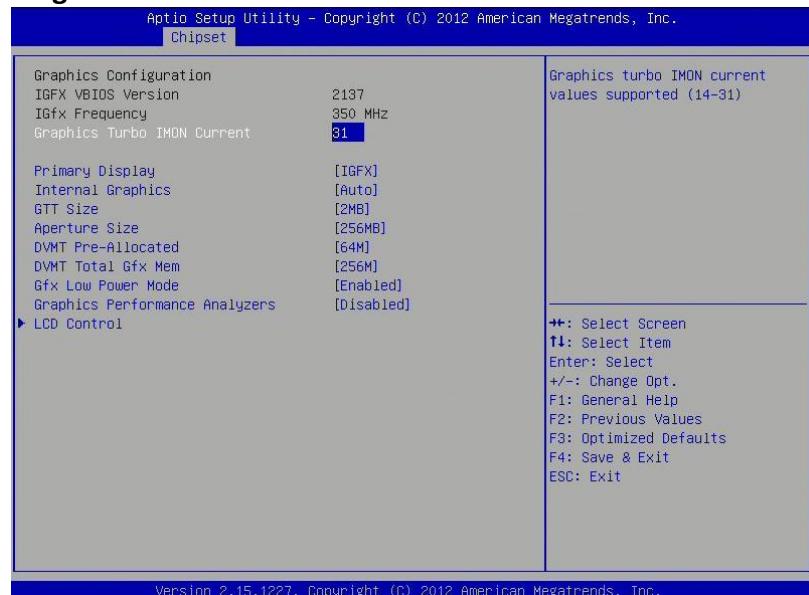

##### Primary Display

Select which of IGFX/PEG/PCI graphics device should be primary display or select SG for switchable Gfx.

##### Internal Graphics

Keep IGD enabled based on the setup options.

##### DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) graphics memory size used by the internal graphics device.

##### DVMT Total Gfx Mem

Select DVMT 5.0 total graphics memory size used by the internal graphics device.


##### Gfx Low Power Mode

This option is applicable for SFF only.

##### Graphics Performance Analyzers


Enable or disable Intel graphics performance analyzers counters.

#### 4.5.2.2 Memory Configuration

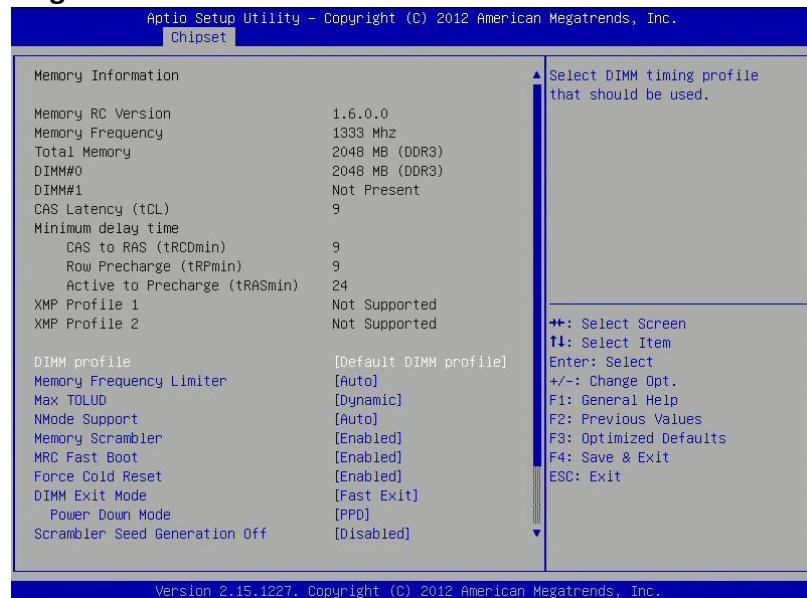

## 4.6 Boot Setting

This section is used to configure the boot features.

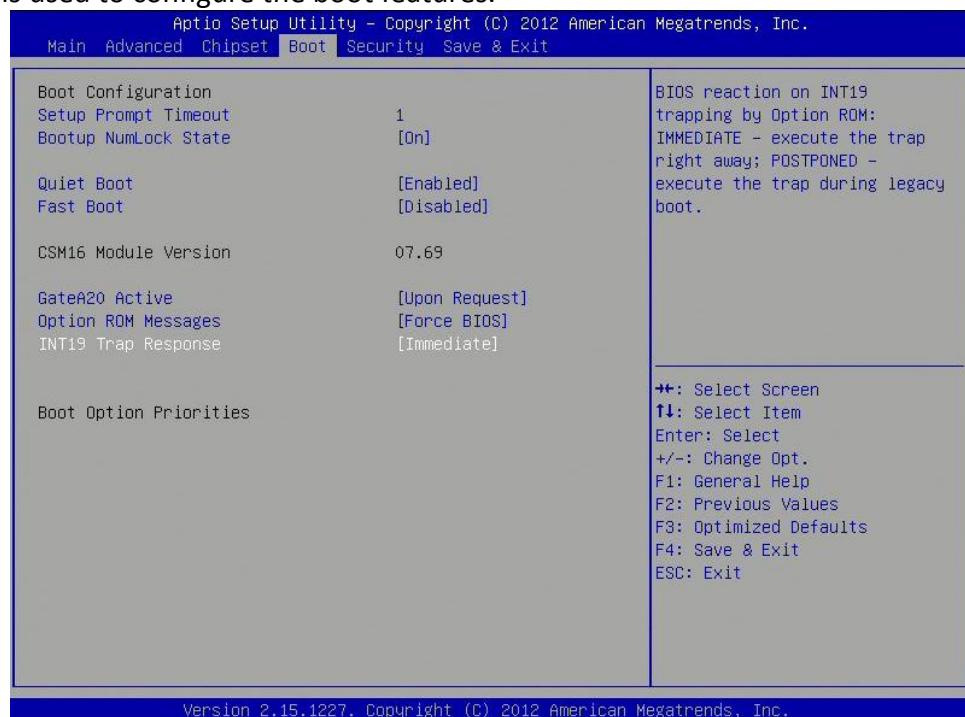

### Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

### Bootup NumLock State

Select the keyboard NumLock state.

### Quiet Boot

Enables or Disables Quiet Boot option.

### Fast Boot

Enables or Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

### GateA20 Active

UPON REQUEST – GA20 can be disabled using BIOS services.

ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

### Option ROM Messages

Set display mode for Option ROM.

### INT19 Trap Response


BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE – execute the trap right away; POSTPONED – execute the trap during legacy boot.

**Boot Option Priorities**

Sets the system boot order.

**4.7 Security**

Use the Security Menu to establish system passwords

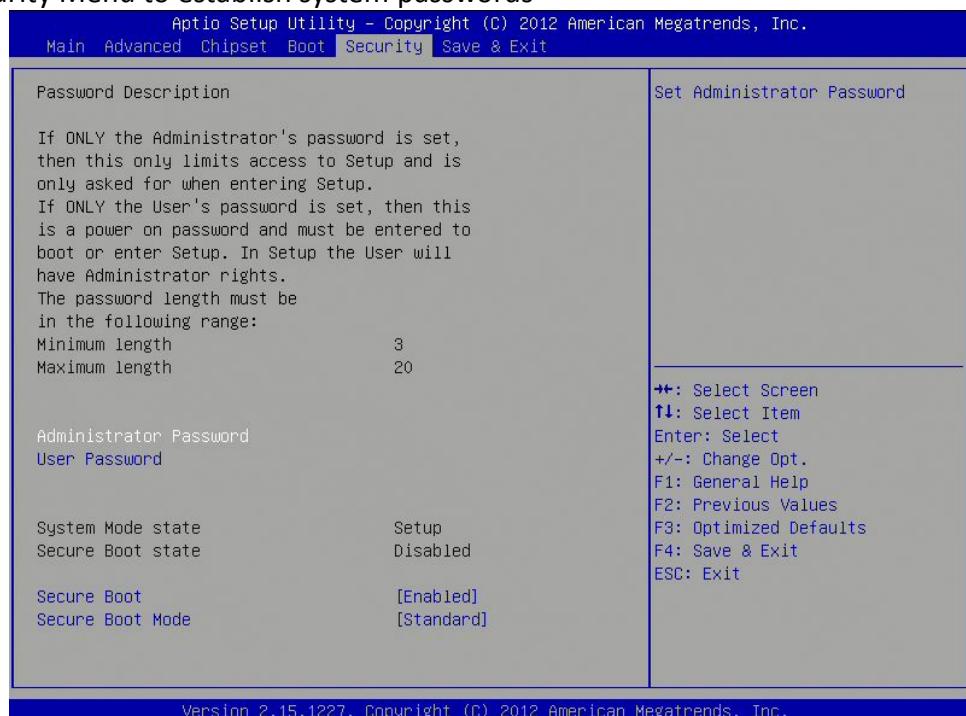**Administrator Password**

Set administrator password.

**User Password**

Set User Password.

**Secure Boot**


Secure boot flow control. Secure boot is possible only if system runs in user mode.

**Secure Boot Mode**

Secure boot mode selector. 'Standard' – fixed secure boot policy, 'custom' – changeable image execution policy and secure boot key databases.

#### 4.8 Save and exit

This screen provides functions for handling changes made to the BIOS settings and the exiting of the Setup program.

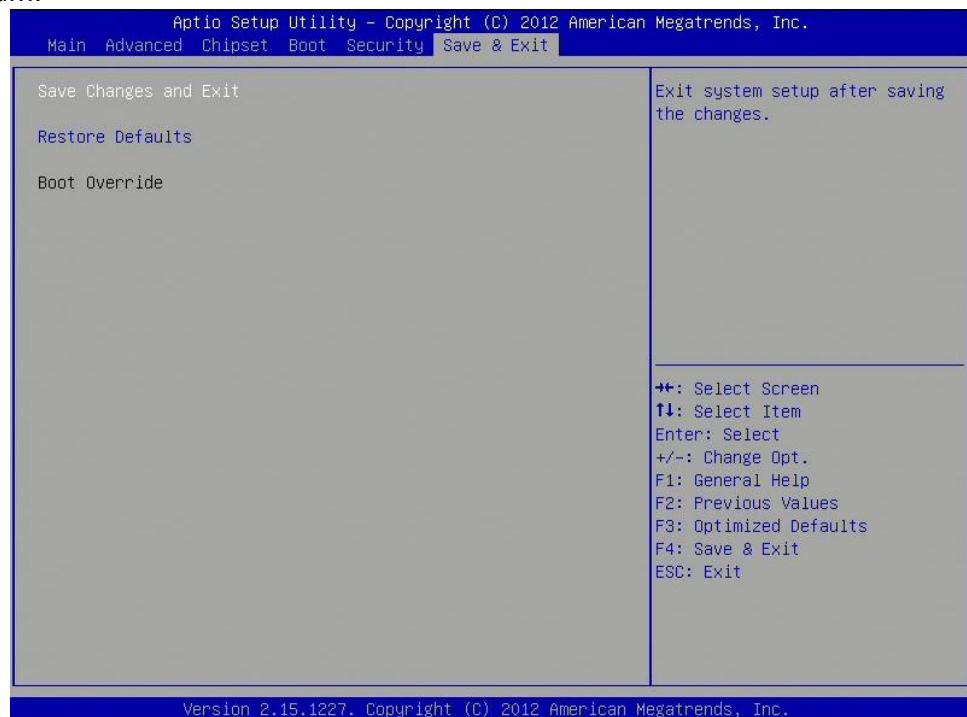

##### **Save Changes and Exit**

Exit system setup after saving the changes.

##### **Restore Defaults**

Restore or Load Defaults values for all the setup options.